 



**CAUTION – THIS PRODUCT MUST BE INSTALLED BY A LICENSED ELECTRICIAN OTHERWISE ALL WARRANTY IS VOID**

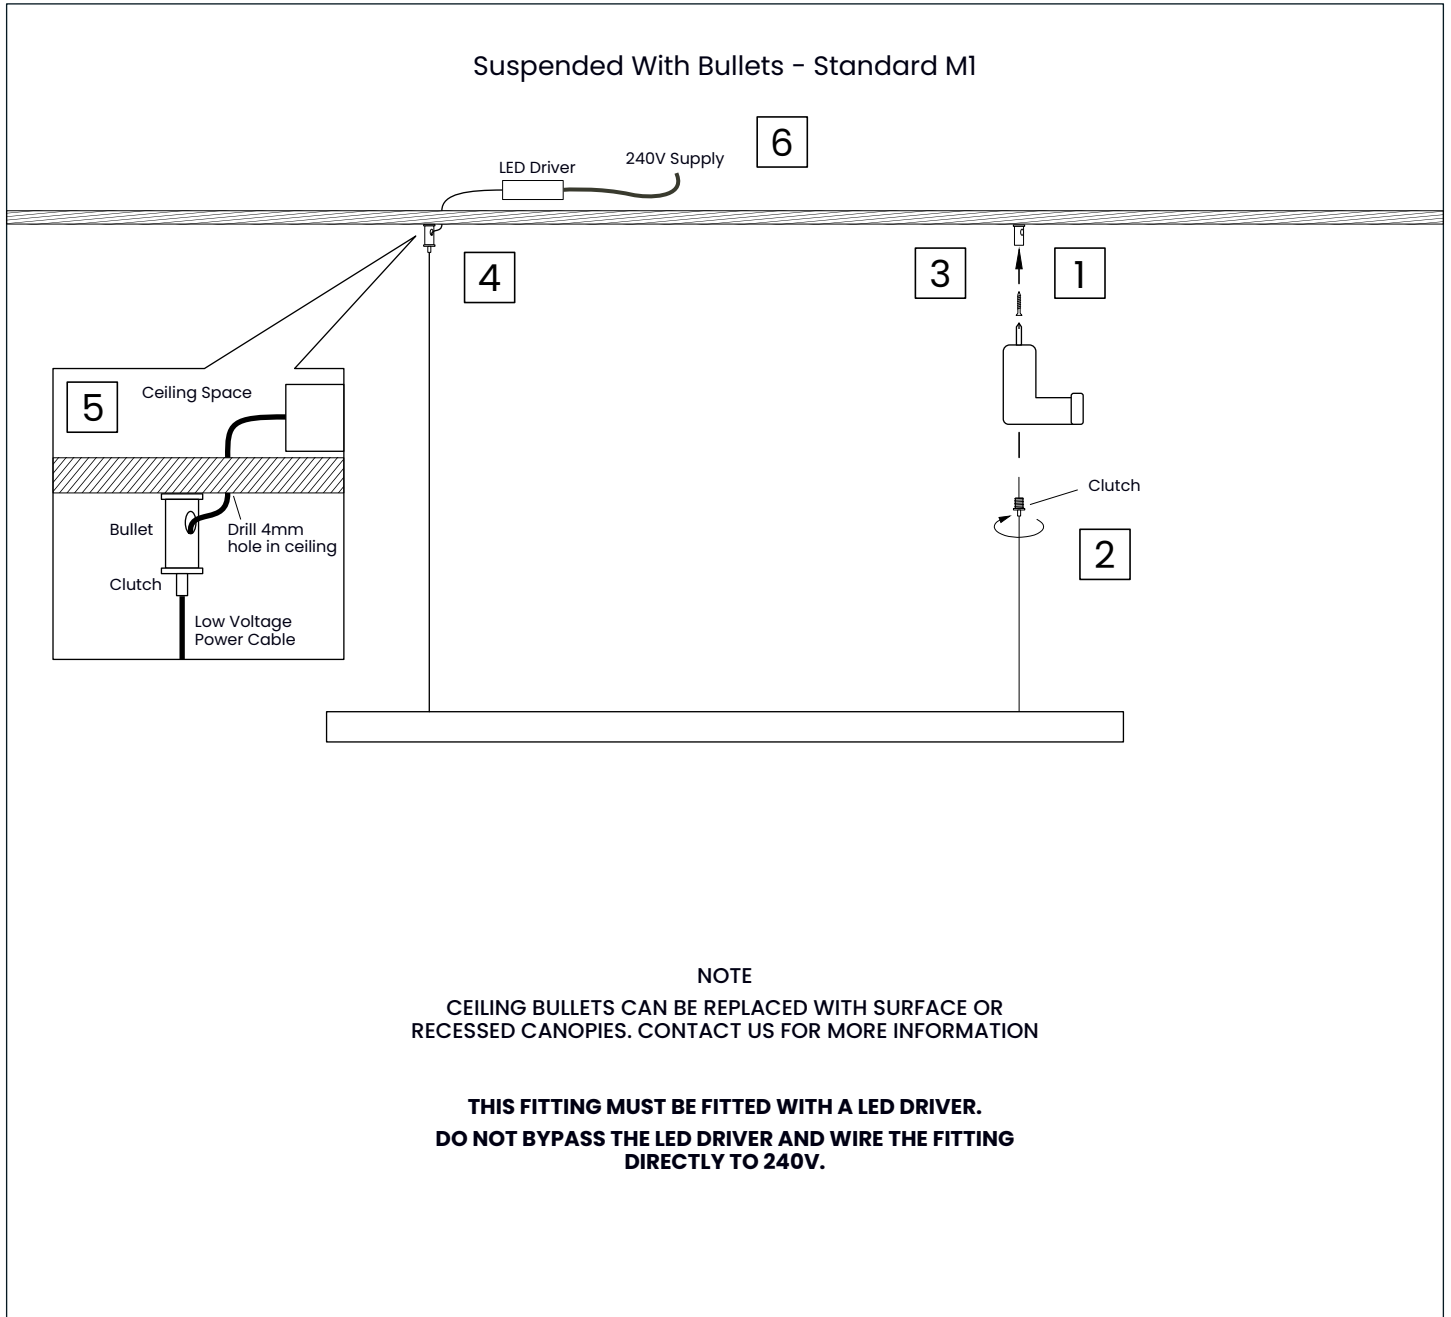

- 1** Fasten the bullet mounts to the ceiling in the correct locations.
- 2** Adjust the cables to the approx desired height before mounting (dont cut the cable until fully installed and leveled)
- 3** Thread the non-power suspension cable through the bullet and wind the clutch into the bullet base.
- 4** Repeat step 3 for the power 2in1 suspension.
- 5** On the low voltage power suspension, drill a small 4mm hole into the ceiling next to the ceiling bullet. Thread the cable into the ceiling space and wire into the LED Driver.
- 6** Wire the driver to 240V and test the fitting.  
*(Triac dimming LED Driver is supplied with all linear as standard)*

**CAUTION – THIS PRODUCT MUST BE INSTALLED BY A LICENSED ELECTRICIAN OTHERWISE ALL WARRANTY IS VOID**
 
## Suspended With Centre Ceiling Canopy - Option M4

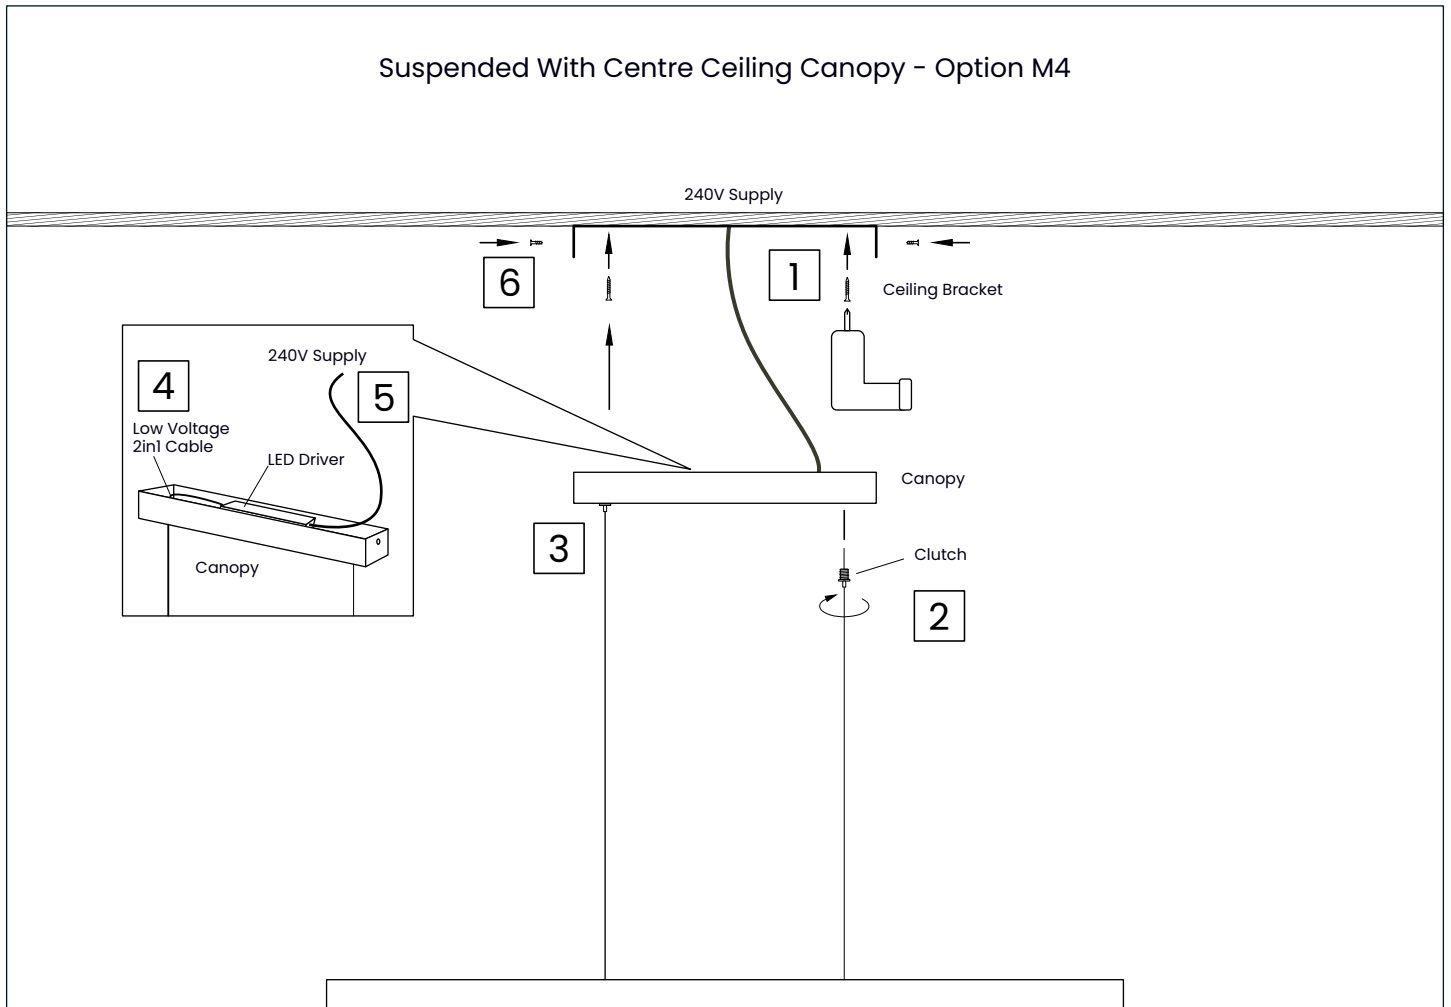

**CAUTION**  
**THIS FITTING MUST BE FITTED WITH A LED DRIVER.**  
**DO NOT BYPASS THE LED DRIVER AND WIRE THE FITTING DIRECTLY TO 240V.**

*(Triac dimming LED Drivers are supplied with all Contessa Linear)*

- 1 Attach the canopy backplate to the ceiling
- 2 Fasten the cable clutch into the ceiling canopy using the nuts and star washers provided.
- 3 Use the clutch to adjust the cable to the desired height before mounting. Store the additional cable in the ceiling canopy.
- 4 Wire the low voltage 2in1 power cable into the secondary side of the LED driver. Brown is + and blue is -.
- 5 Wire the Primary side of the Driver to the 240V supply.
- 6 Mount the canopy to the ceiling bracket using the screws provided and make adjustments to the suspension height if required.