 



CAUTION – THIS PRODUCT MUST BE INSTALLED BY A LICENSED ELECTRICIAN OTHERWISE ALL WARRANTY IS VOID

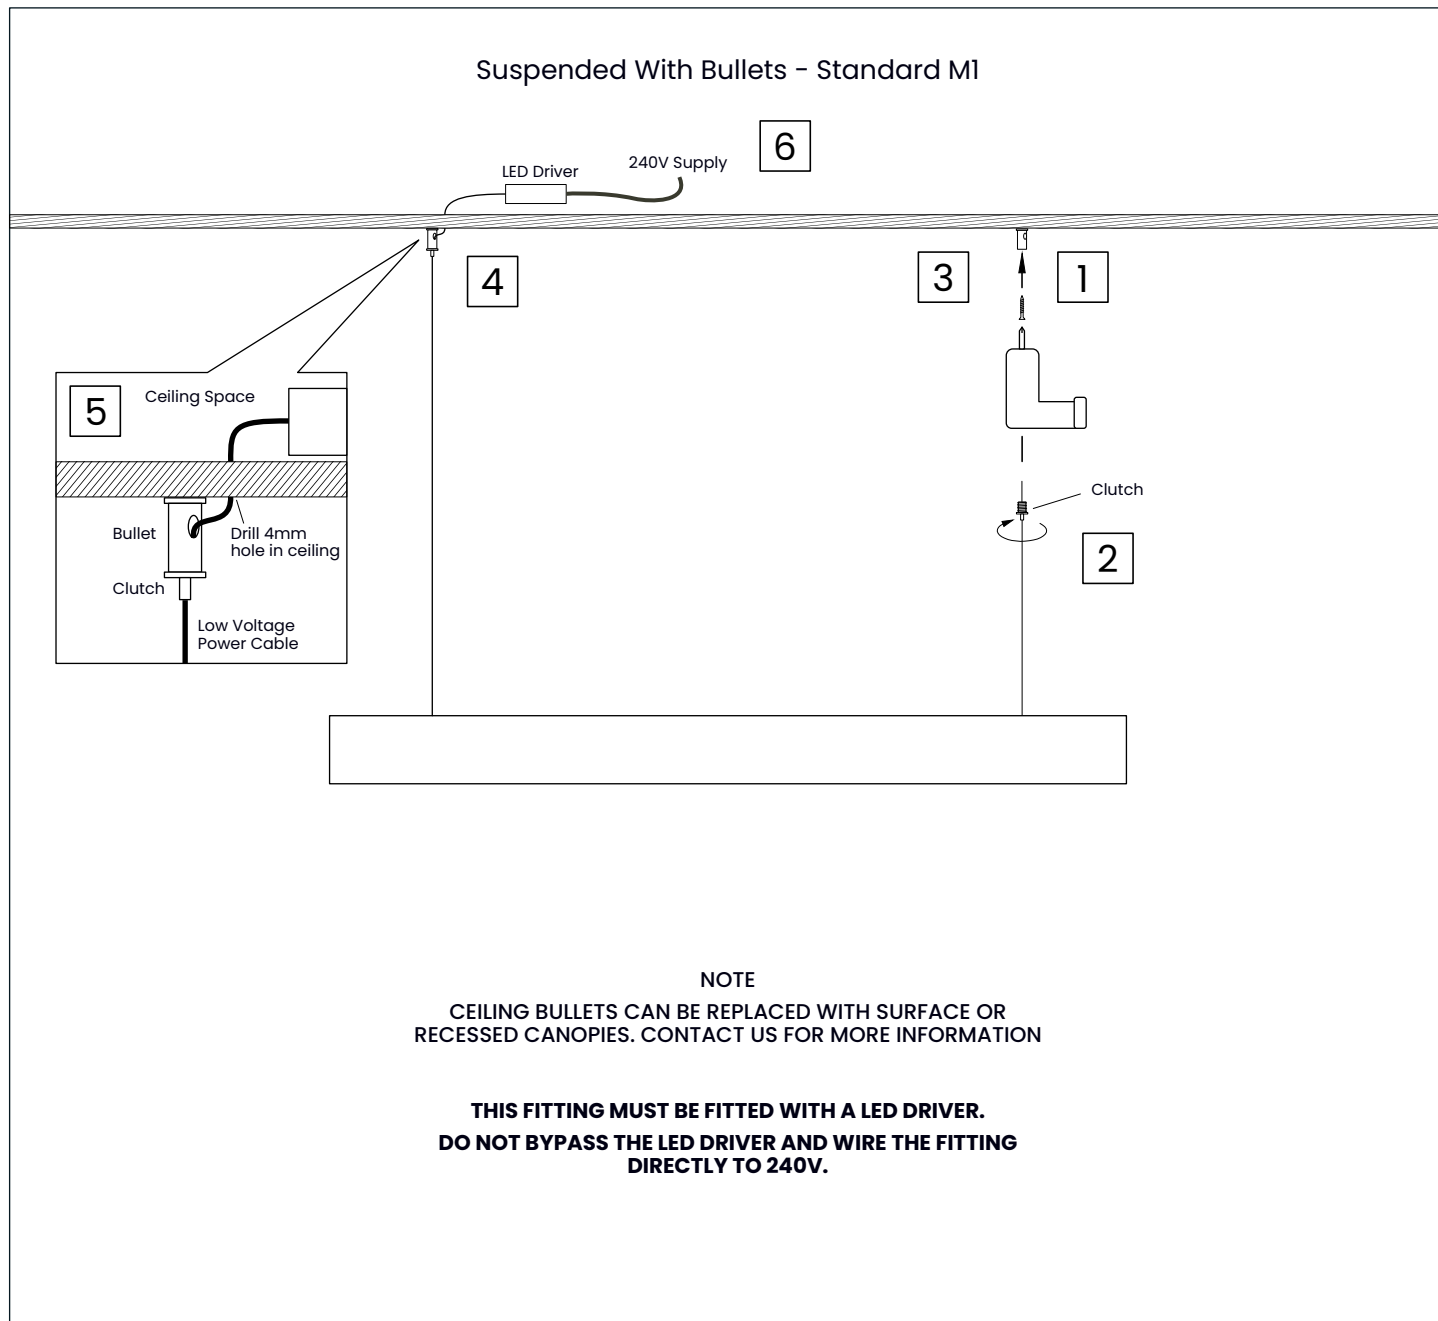

- 1 Fasten the bullet mounts to the ceiling in the correct locations.
- 2 Adjust the cables to the approx desired height before mounting (dont cut the cable until fully installed and leveled)
- 3 Thread the non-power suspension cable through the bullet and wind the clutch into the bullet base.
- 4 Repeat step 3 for the power 2in1 suspension.
- 5 On the low voltage power suspension, drill a small 4mm hole into the ceiling next to the ceiling bullet. Thread the cable into the ceiling space and wire into the LED Driver.
- 6 Wire the driver to 240V and test the fitting.
(Triac dimming LED Driver is supplied with all linear as standard)

CAUTION – THIS PRODUCT MUST BE INSTALLED BY A LICENSED ELECTRICIAN OTHERWISE ALL WARRANTY IS VOID

 Suspended With Centre Ceiling Canopy - Option M4

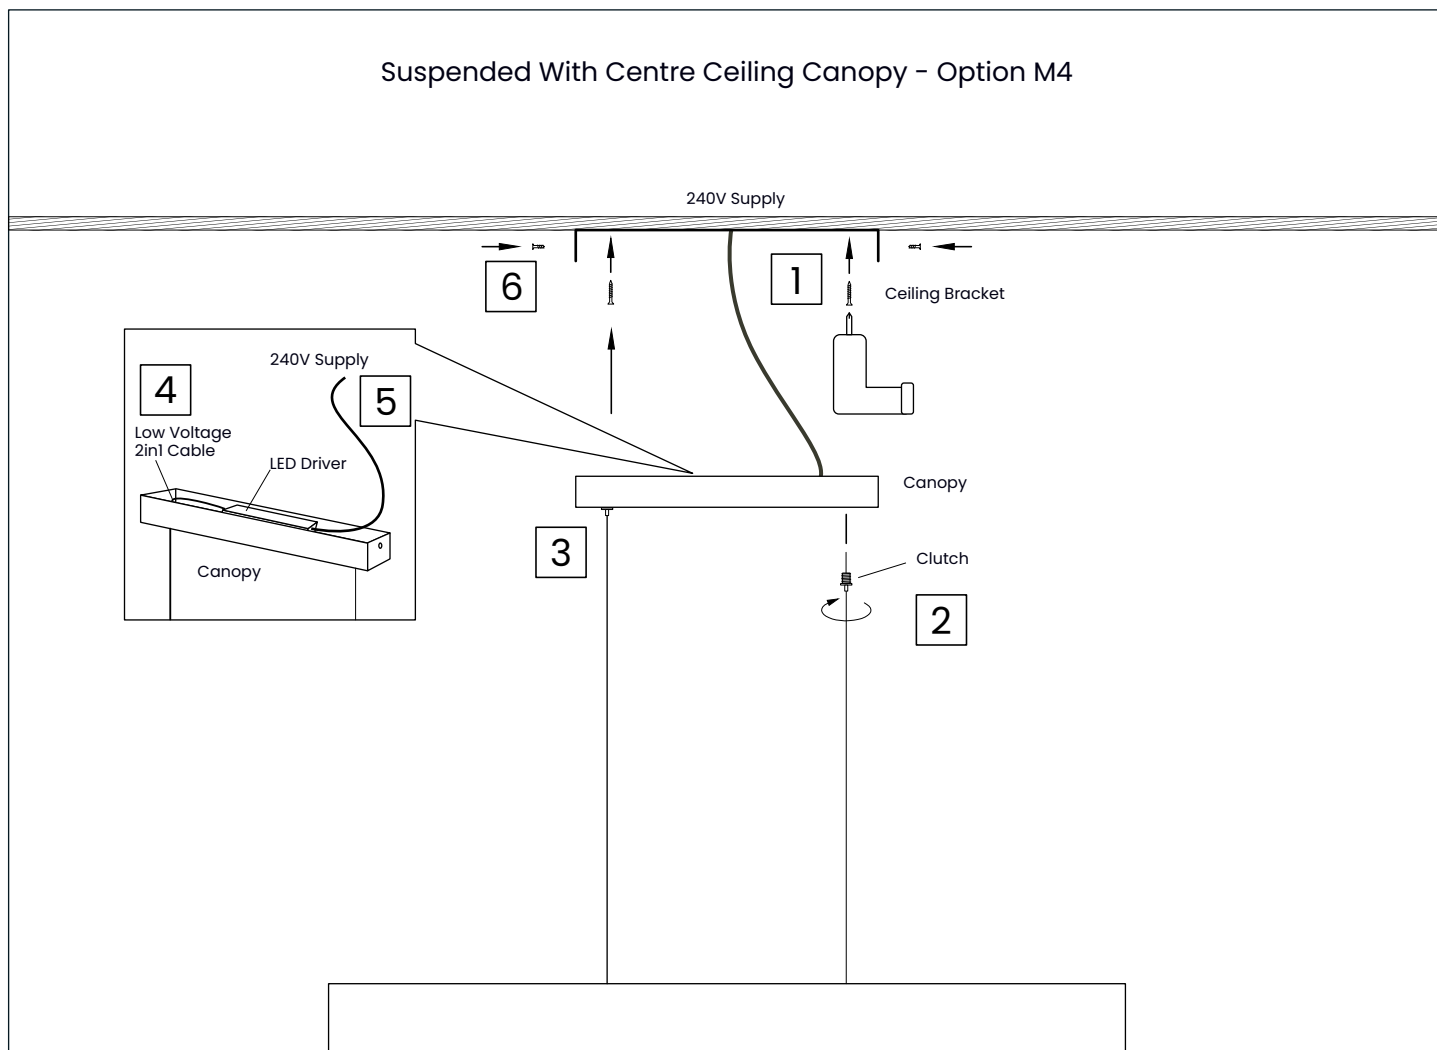

CAUTION
THIS FITTING MUST BE FITTED WITH A LED DRIVER.
DO NOT BYPASS THE LED DRIVER AND WIRE THE FITTING DIRECTLY TO 240V.

(Triac dimming LED Drivers are supplied with all Contessa Linear)

- 1** Attach the canopy backplate to the ceiling
- 2** Fasten the cable clutch into the ceiling canopy using the nuts and star washers provided.
- 3** Use the clutch to adjust the cable to the desired height before mounting. Store the additional cable in the ceiling canopy.
- 4** Wire the low voltage 2in1 power cable into the secondary side of the LED driver. Brown is + and blue is -.
- 5** Wire the Primary side of the Driver to the 240V supply.
- 6** Mount the canopy to the ceiling bracket using the screws provided and make adjustments to the suspension height if required.