


Linear 30

Install Guide DTC

Bullets Mounting (M1)

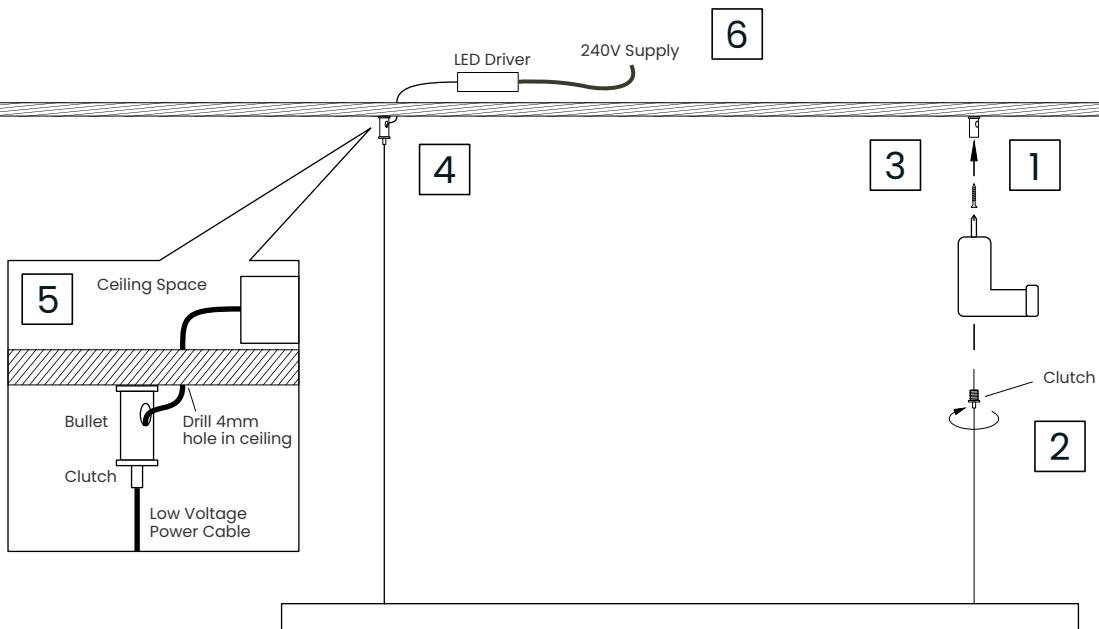

NOTE

CEILING BULLETS CAN BE REPLACED WITH SURFACE OR RECESSED CANOPIES. CONTACT US FOR MORE INFORMATION


**THIS FITTING MUST BE FITTED WITH A LED DRIVER.
DO NOT BYPASS THE LED DRIVER AND WIRE THE FITTING
DIRECTLY TO 240V.**

<p>1 Fasten the bullet mounts to the ceiling in the correct locations.</p>	<p>2 Adjust the cables to the approx desired height before mounting (dont cut the cable until fully installed and leveled)</p>	<p>3 Thread the non-power suspension cable through the bullet and wind the clutch into the bullet base.</p>	<p>4 Repeat step 3 for the power 2in1 suspension.</p>
<p>5 On the low voltage power suspension, drill a small 4mm hole into the ceiling next to the ceiling bullet. Thread the cable into the ceiling space and wire into the LED Driver.</p>	<p>6 Wire the driver to 240V and test the fitting. (Triac dimming LED Driver is supplied with all linear as standard)</p>		

Linear 30

Install Guide BTC

Centre Canopy Mounting (M4)

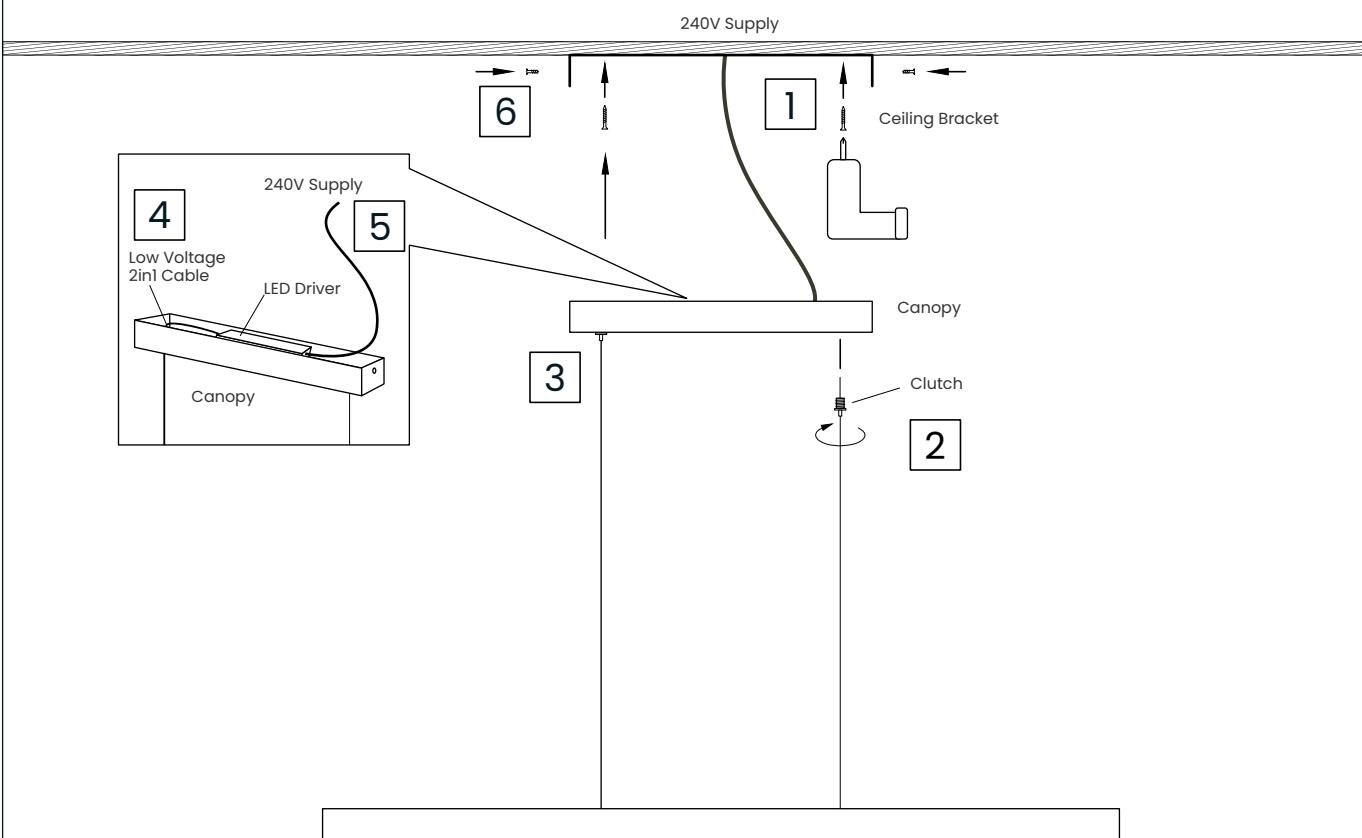

CAUTION

THIS FITTING MUST BE FITTED WITH A LED DRIVER.
DO NOT BYPASS THE LED DRIVER AND WIRE THE FITTING DIRECTLY
TO 240V.

(Triac dimming LED Drivers are supplied with all Contessa Linear)

- 1** Attach the canopy backplate to the ceiling
- 2** Fasten the cable clutch into the ceiling canopy using the nuts and star washers provided.
- 3** Use the clutch to adjust the cable to the desired height before mounting. Store the additional cable in the ceiling canopy.
- 4** Wire the low voltage 2in1 power cable into the secondary side of the LED driver. Brown is + and blue is -.
- 5** Wire the Primary side of the Driver to the 240V supply.
- 6** Mount the canopy to the ceiling bracket using the screws provided and make adjustments to the suspension height if required.