
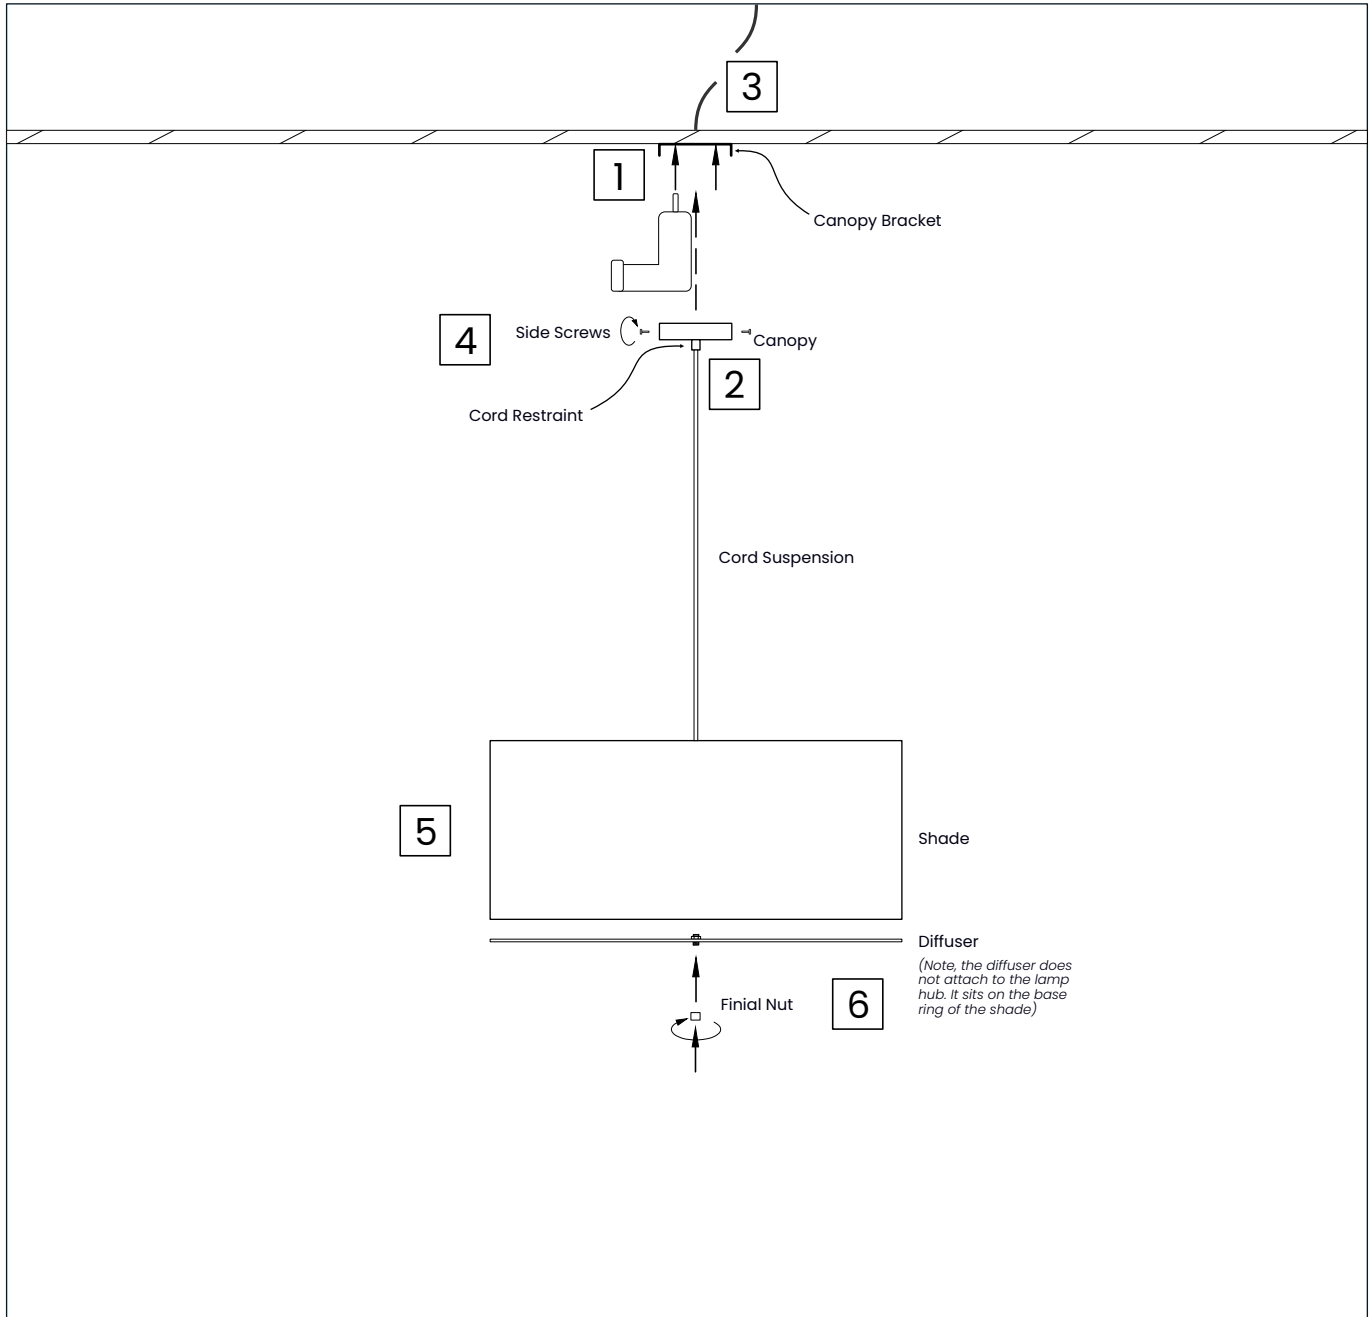


Portland

Install Guide

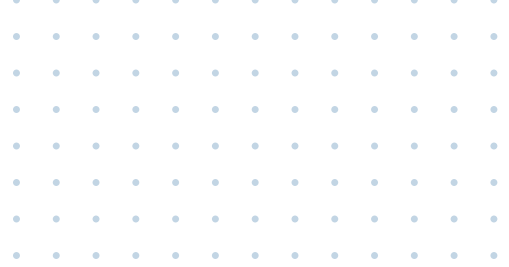

- 1** Attach the canopy bracket to the ceiling
- 2** Thread suspension cable through the canopy to the correct length and tighten the cord restraint screw
- 3** Wire the 240V power cable to 240V supply - Ensure the canopy earth wire is connected to earth
- 4** Fasten the ceiling canopy to the ceiling canopy bracket using the side screws.
- 5** Install the globes and test the fitting.
- 6** Remove the paper film from the diffuser, slide the diffuser into the shade at an angle and let the diffuser rest on the bottom shade ring.