


Oslo

Install Guide

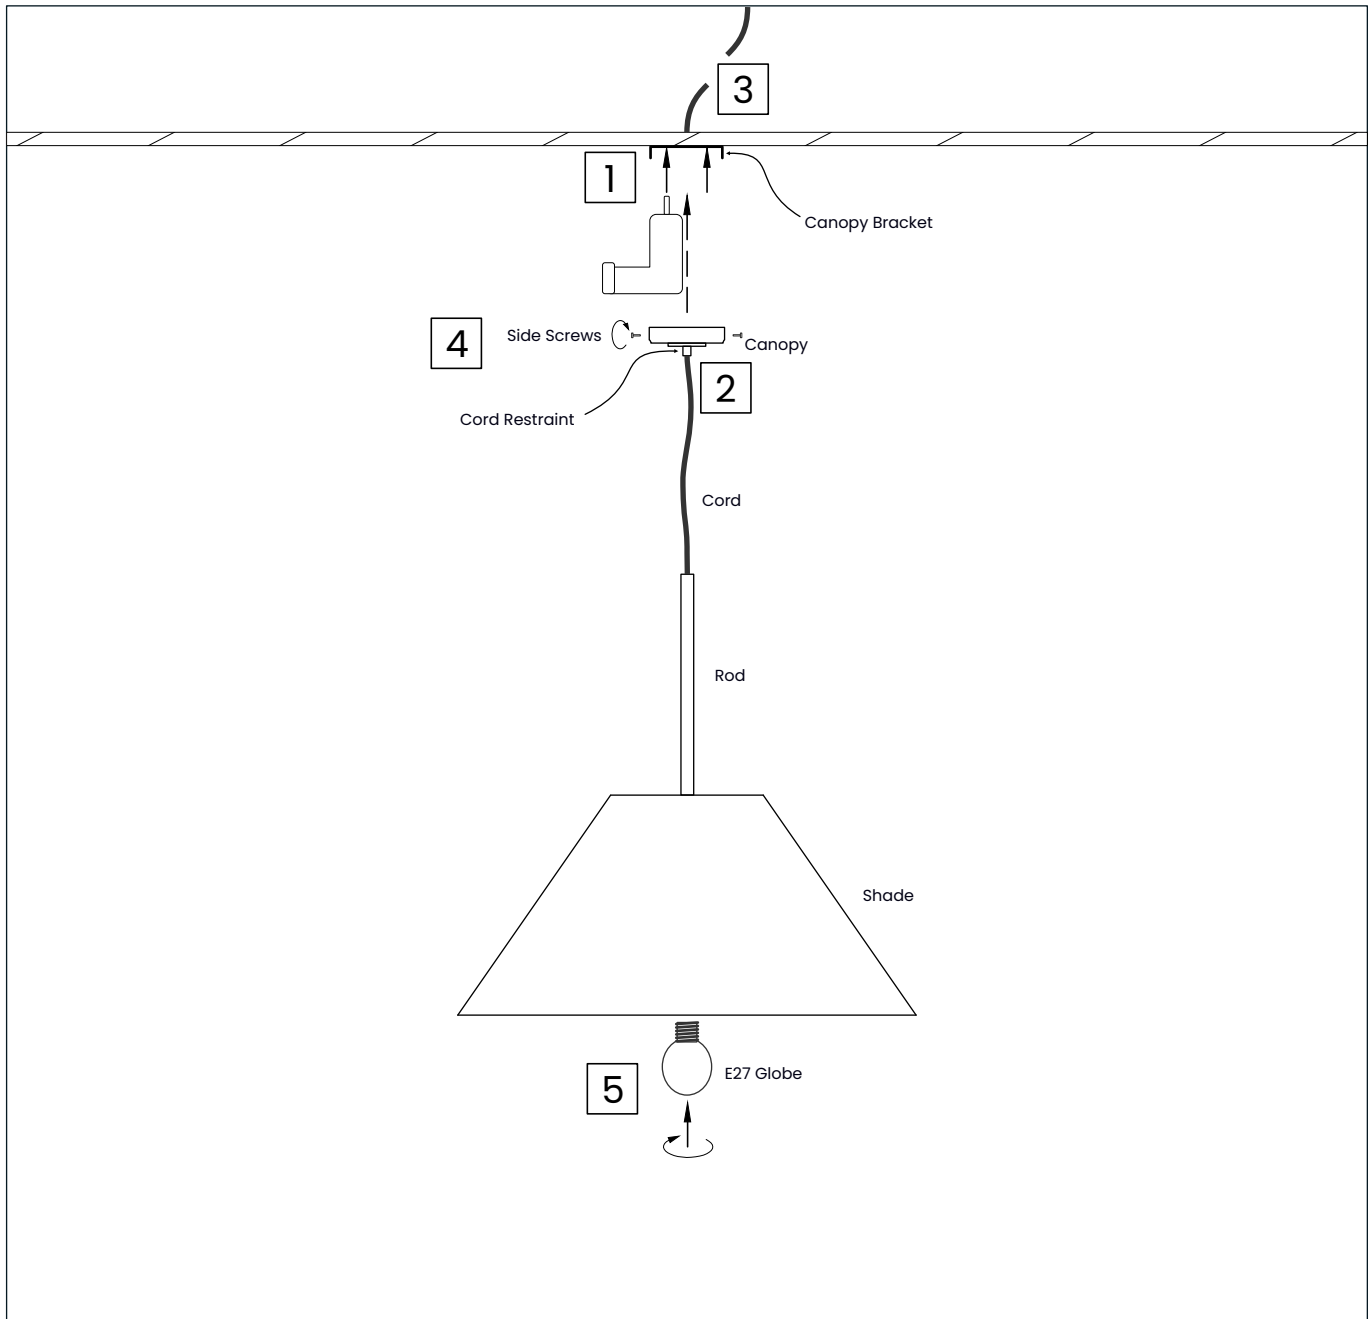

1 Attach the canopy bracket to the ceiling

2 Thread suspension cable through the canopy to the correct length and tighten the cord restraint screw

3 Wire the 240V power cable to 240V supply - Ensure the canopy earth wire is connected to earth

4 Fasten the ceiling canopy to the ceiling canopy bracket using the side screws

5 Install the globes and test the fitting.